

TRANSPORTING

1. Turn the fuel cap lever and fuel valve to OFF.
2. Place the carburetor drain tube in a suitable container.
3. Turn the drain screw counterclockwise to drain the gasoline from the carburetor.
5. Remove the battery, disconnecting the negative (-) terminal first, then the positive (+) terminal. When reinstalling the battery, connect the positive (+) terminal first, then the negative (-) terminal.
6. If wheel removal is required when transporting, follow the procedures on the following pages.

WARNING

- * *Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.*
- * *Never incline the machine with the front wheel up or rest it on its side without draining the fuel. Fuel vapor or spilled fuel may ignite.*

4. After draining, turn the drain screw clockwise until tight.

NOTE:

- * Be sure the fuel drain is closed (screw turned clockwise) before refueling the ATC.
- * It is unnecessary to drain the engine oil from the crankcase, as no appreciable oil leakage will occur when the ATC is rested on its side.