


FRONT WHEEL/SUSPENSION/STEERING

Remove the clutch switch connectors.



Remove the clutch lever holder bolts.
Remove the clutch lever holder and clutch lever bracket assembly.

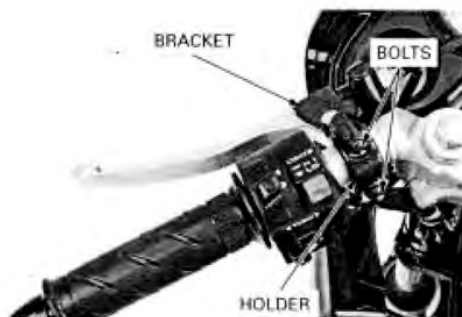

Remove the screws and left handlebar switch housing.



Remove the grip end and left handlebar grip.

