


3. Remove the rear brake adjusting nut (3), disconnect the brake rod (4) from the brake arm (5) by pushing down on the rear brake pedal.
4. Disconnect the brake stopper arm (6) from the brake panel (7) by removing the cotter pin (8), stopper arm nut (9), washer (10) and rubber grommet.
5. Remove the axle holding bolt (11).

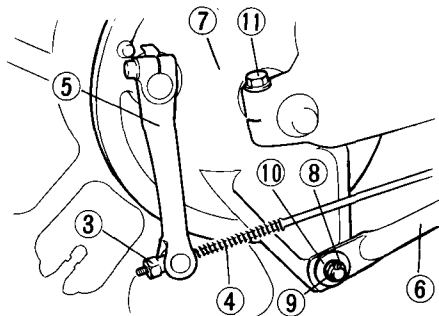

- |                   |                        |
|-------------------|------------------------|
| (3) Adjusting nut | (8) Cotter pin         |
| (4) Brake rod     | (9) Stopper arm nut    |
| (5) Brake arm     | (10) Washer            |
| (6) Stopper arm   | (11) Axle holding bolt |
| (7) Brake panel   |                        |