


# Piston/Piston Rings/Piston Pin

## Cylinder Head Removal


1. Clean the area above the engine before disassembly to prevent dirt falling into the engine.
2. Drain the radiator coolant after cooling the motorcycle (page 42).
3. Remove the seat and fuel tank (pages 29, 30).
4. Remove the subframe (page 32).
5. Remove the carburetor (page 122).
6. Remove the exhaust pipe (page 90).

7. Remove the spark plug (page 55).
8. Remove the cylinder head cover (page 56).
9. Position the piston at top dead centre on the compression stroke (page 56).  
Remove the camshaft (page 58).
10. Loosen the water hose clamp (1) and disconnect the water hose (2).

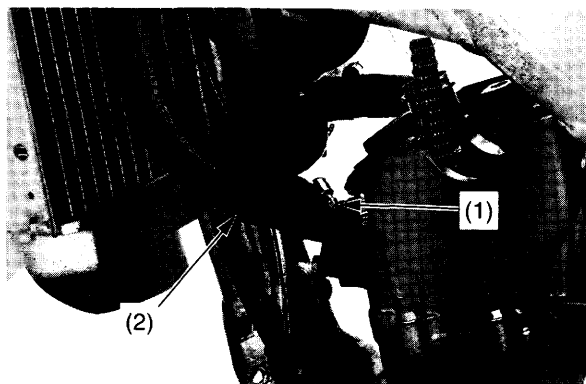

- (1) water hose clamp  
(2) water hose

11. Remove the engine hanger nuts/bolts (3) and engine hanger plates (4).

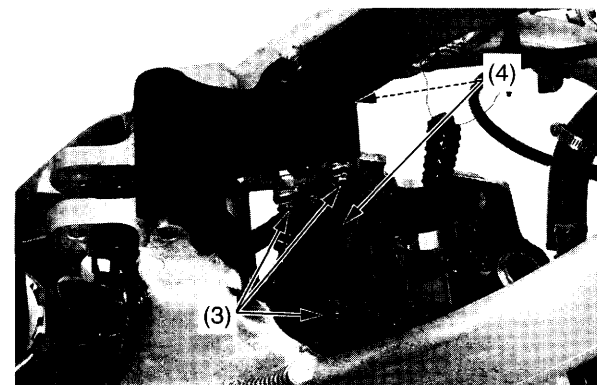

- (3) engine hanger nuts/bolts  
(4) engine hanger plates