

ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch is on the handlebar cover.

| Key Position | Function | Key Removal |
|----------------------|---|------------------------|
| ON | All electrical circuits closed. Engine and lights can be operated. | Key cannot be removed. |
| ACC | All electrical circuits are off except for the ACC circuit. | Key cannot be removed. |
| OFF | All electrical circuits are off. Engine cannot be started. | Key can be removed. |
| P (parking) | For parking the motorcycle near traffic. The taillight, position light, licence light and ACC circuit are on; but the other lights are off. The rear suspension air pressure can be operated. The engine cannot be started. | Key can be removed. |
| LOCK (steering lock) | Steering is locked. Engine and lights cannot be operated. | Key can be removed. |

