

MAINTENANCE

COOLANT

Refer to the Safety Precautions on page 130.

Coolant Replacement

Coolant should be replaced by your Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.

▲ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.