

Installation Notes:

To install the front wheel assembly, align the cut-ways in the brake disc with the retainers on front wheel hub and align the speedometer gearbox in brake caliper with the gearbox retainer in the wheel and with groove (1) in brake caliper, bracket (2) with tongue (3) on left fork leg.

Insert the front axle and tighten to specified torque.

Axle: 55—65 N·m

(5.5—6.5 kg·m, 39—49 ft·lb)

Install the axle holder facing the arrow mark (9) to front and tighten the forward nut first and the nut to specified torque.

Axle holder nut: 18—25 N·m

(1.8—2.5 kg·m, 14—19 ft·lb)

