


## Headlight Bulb

1. Disconnect the connector (1).
2. Remove the seat rubber (2).
3. Remove the headlight bulb (3) while pressing down on the pin (4).
4. Install a new bulb in the reverse order of removal.

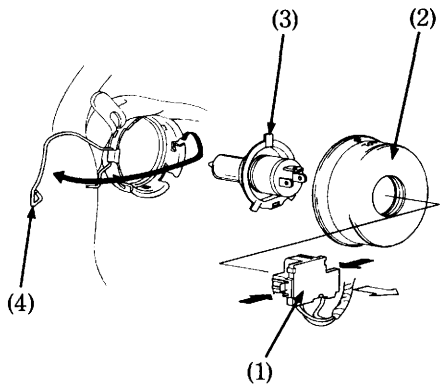

- (1) Connector  
(2) Seat rubber

- (3) Headlight bulb  
(4) Pin