


Starter Button

The starter button (1) is below the engine stop switch. When the starter button is pressed and the transmission is in neutral, the starter motor will crank the engine.

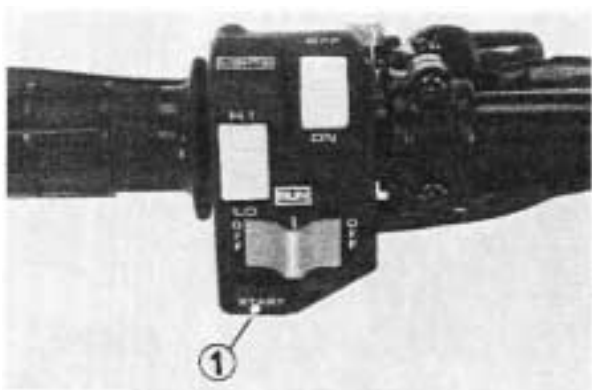


(1) Starter button

Headlight Switch/Headlight Dimmer Switch

The headlight (1) and headlight dimmer (2) switches are above the engine stop switch.

Turn the headlight ON with the headlight switch after the engine has been started, and select high beam (HI) or low beam (LO) with the headlight dimmer switch.

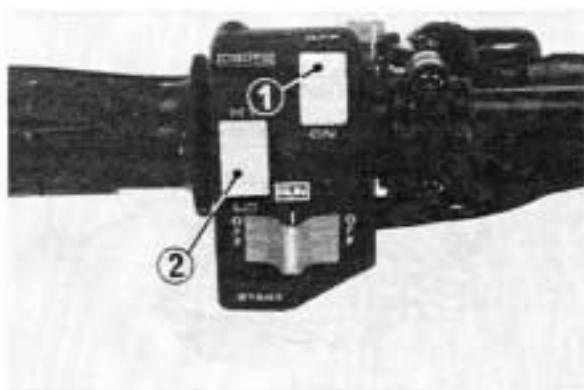

(1) Headlight switch (2) Headlight dimmer switch