

Gear Position Indicator

The gear position indicator (1) (Fig. 2-16) shows the gear position when the ignition switch is in the ON (I) position and the engine is running.

The indicator displays: N for neutral, R for reverse, and 1–5 for the five forward speed gears.

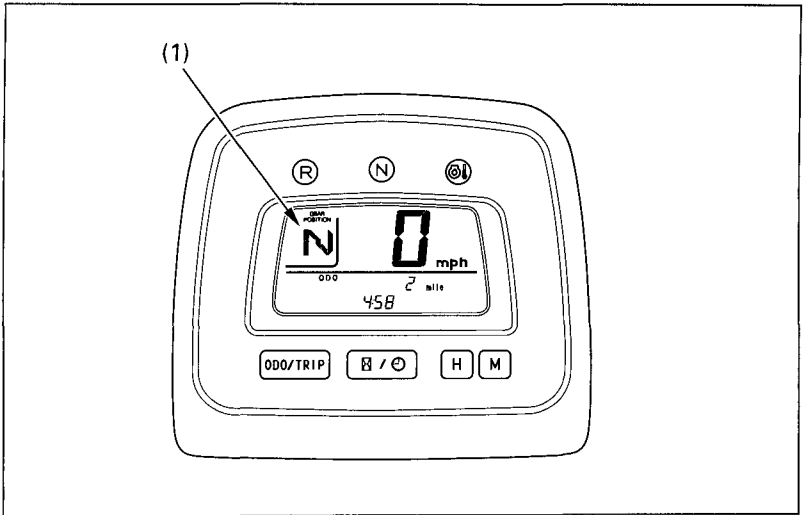


Fig. 2-16 (1) Gear position indicator