

Engine Oil & Filter

Checking & Adding Engine Oil

Refer to *Safety Precautions* on page 75 .

Check the engine oil level each day before operating your ATV and add if needed.

Before riding your ATV, check the engine oil level.

1. Park your ATV on a firm, level surface.
2. Remove the oil filler cap/dipstick (1) from the oil tank (2) and wipe it clean.
3. Insert the oil filler cap/dipstick without screwing it in, then remove the oil filler cap/dipstick and check the oil level.
 - If the oil level is above the LOWER level mark (4) on the dipstick, install the oil filler cap/dipstick, and proceed to the Oil Tank Level Check (page 95).
 - If the oil level is below the LOWER level mark on the dipstick, install the oil filler cap/dipstick, and proceed to the Crankcase Oil Level Check (page 94).