

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		FIRST ⇒	km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	114
	AIR CLEANER	NOTE 1			C	C	110
	SPARK PLUG					I	122
*	VALVE CLEARANCE/ DECOMPRESSOR SYSTEM			I	I	I	125
	ENGINE OIL			INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			92
	ENGINE OIL FILTER			R	R	R	96
*	TRANSMISSION OIL				R	R	99
*	ENGINE IDLE SPEED			I	I	I	120
	RADIATOR COOLANT	NOTE 3			I	I	104
*	COOLING SYSTEM	NOTE 2			I	I	105

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.