


Adjustment

1. Turn the rear brake adjusting nut (4).
Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5).
2. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.
3. Check the freeplay. If you can't adjust the freeplay properly, see your Honda dealer.

RIGHT REAR

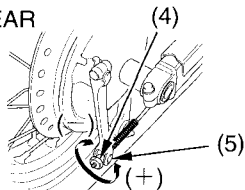

- (4) adjusting nut (+) increase freeplay
(5) arm pin (-) decrease freeplay

Other Inspections

- Check that the brake pedal assembly is positioned properly and the securing bolts are tight.
- Make sure the brake rod, brake arm, spring, and fasteners are in good condition.