


# Side Cover Removal

Refer to *Safety Precautions* on page 45 .

LEFT SIDE

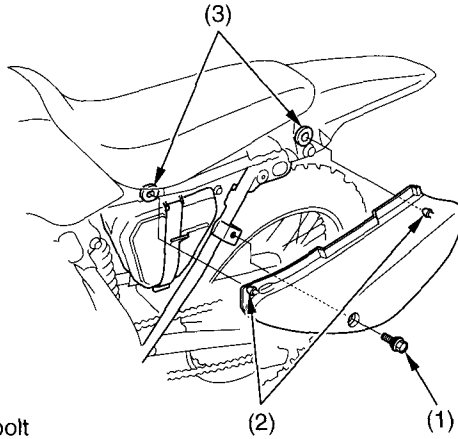

- (1) bolt
- (2) prongs
- (3) rubber grommets

## Removal

1. Remove the bolt ( 1 ) securing the side cover.
2. Pull both side cover prongs ( 2 ) out of the rubber grommets ( 3 ).

## Installation

1. Slide the top of the side cover under the bottom edge of the seat.
2. Align the side cover prongs with the rubber grommets. Press the side cover into position.
3. Install the securing bolt and tighten it.