

**NOTICE**

If the air cleaner element is not replaced correctly, it could allow foreign particles or dust directly into the engine causing friction or wear resulting in engine trouble.

Always make sure that the air cleaner is correctly installed again after removal.

Make sure that you do not squirt water directly into the air cleaner element when washing the motorcycle as this may allow water into the air cleaner making starting the engine difficult.

**NOTICE**

Remove the air cleaner element and check for any signs of wear, dirt, clogging or other kind of damage.

\*Clean the element if you find it to be dirty or clogged.

\*Replace the element if you find it to be damaged in any way.