



- 1 Select [Background], and then press the **ENT** switch.
- 2 Select [Auto], and then press the **ENT** switch to [ON] (auto) or [OFF] (manual) the function.
- 3 If you select to [ON] (auto), push the  or  of the   sel left/right switch to select your preferred level.
  - ▶ Push and hold the  or  of the   sel left/right switch to advance the figure fast.

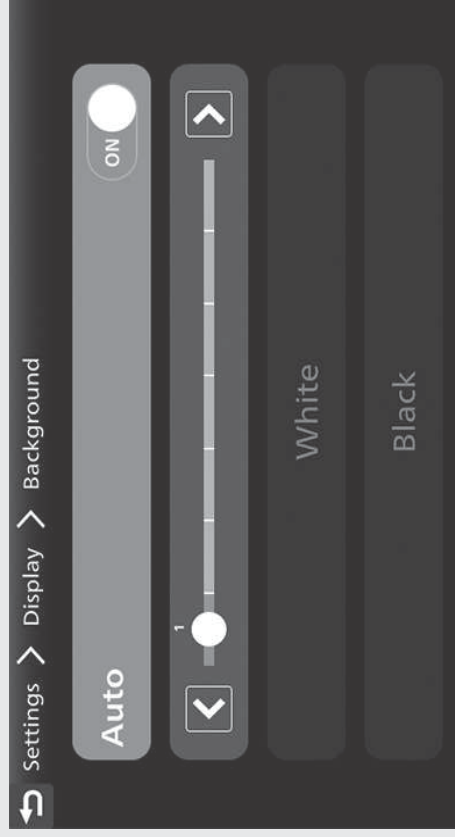

If you select to [OFF] (manual), press the  sel up switch or  sel down switch to select the [White] or [Black].

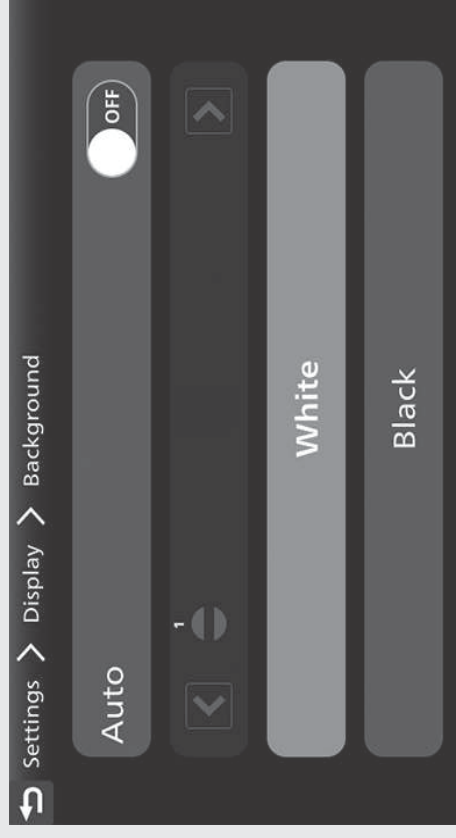

- 4 Return to the riding information, previous screen or Home screen. **▶ P.38**
- You can also perform the above settings by using the touch screen.

**Setting range:** Auto Level 1 to 7, White or Black

**Default:** Auto 1