

Changing between Neutral and AT MODE/MT MODE

Changing from Neutral (N) to AT MODE

Press the **D-S** side of the N-D switch (1). The D mode indicator comes on and first gear is selected.

Changing from AT or MT MODE to Neutral

Press **N** on the N-D switch (2).

Changing between D mode and S mode while in AT MODE

Press the **D-S** side of the N-D switch. The S or D is shown in the gear position indicator (3, 4).

Changing between AT MODE and MT MODE

Press the AT/MT switch (5).

The AT indicator goes out while MT MODE is selected (6).

The gear position is displayed on the gear position indicator while MT MODE is selected (6).

