

Wheels ► Wheels Rims & Spokes

1. Inspect the wheel rims and spokes for damage.
2. Tighten any loose spokes.
► **CRF1100A4/D4**
Use the ballpoint hexagon wrench with a length of 5.5 in (140 mm) or more.
3. Rotate the wheel slowly to see if it appears to “wobble.” If it does, the rim is out of round or not “true.” If the wobble is noticeable, see your dealer for inspection.

