

Ignition Switch


The ignition switch (1) is used to prevent unauthorized use of the motorcycle.

Before riding, insert the key and turn it to the ● (ON) position.

| Key Position | Function | Key Removal |
|--------------|---|----------------------------|
| OFF | The engine cannot be operated. | The key can be removed. |
| ● (ON) | With the transmission in neutral or in gear with the clutch lever pulled in, the engine can be started. | The key cannot be removed. |

After parking the motorcycle, remove the key.

FRONT

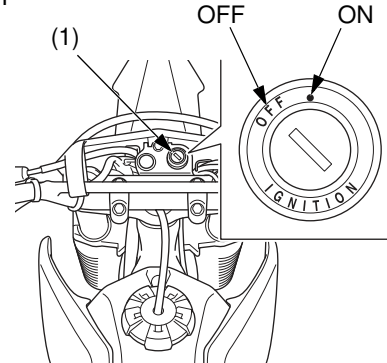

(1) ignition switch

