

Fuel

3. After refueling, turn the fuel fill cap clockwise until it clicks.
4. Insert the breather tube in the steering stem nut.

If you replace the fuel fill cap, use a Honda Genuine replacement part or equivalent.