


Taking Care of the Unexpected

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuse.
2. For access the main fuse (1) and sub fuse (2), remove the left side cover (page 53).

Main Fuse Access:

3. Remove the starter magnetic switch (3) from the ribs (4) of the battery box.
4. Disconnect the wire connector (5) of the starter magnetic switch.
5. Pull the fuse out. If the main fuse is blown (6), install the spare main fuse (7).
6. Reconnect the wire connector.
7. Install the starter magnetic switch.

LEFT SIDE

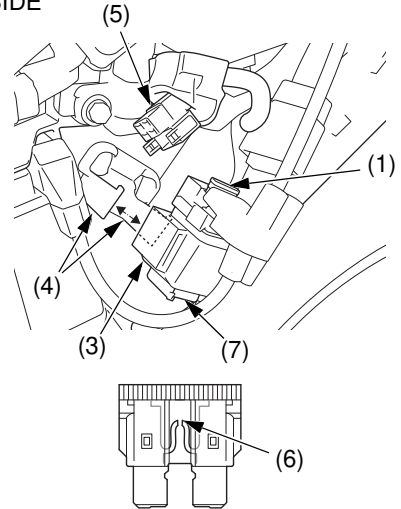

- | | |
|-----------------------------|---------------------|
| (1) main fuse | (5) wire connector |
| (3) starter magnetic switch | (6) blown fuse |
| (4) ribs | (7) spare main fuse |