

Changing the mileage unit:

- ① Turn the ignition switch to the ON position.
- ② Select the odometer display. ➡ **P.21**
- ③ Press and hold the MODE switch to select the "mile" or "km".

