


Battery

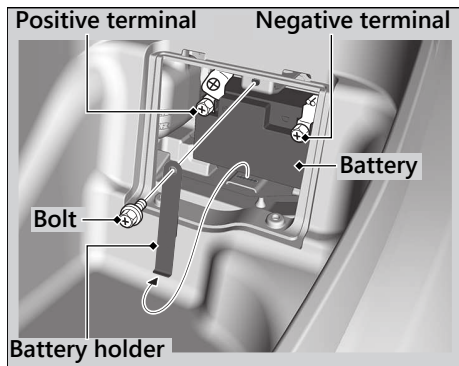

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the battery lid. ➡ P. 66
2. Remove the battery holder by removing the bolt.

3. Disconnect the negative $\ominus$ terminal from the battery.
4. Disconnect the positive $\oplus$ terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive $\oplus$ terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➡ P. 22
For proper handling of the battery, see "Maintenance Fundamentals." ➡ P. 54
"Battery Goes Dead." ➡ P. 93