

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
			mi	100	600	1200				
			km	150	1000	2000				
			MONTH	1	6	12				
	NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—		
*	THROTTLE OPERATION					I		138		
	AIR CLEANER	NOTE 1			C	C		133		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I		137		
	SPARK PLUG				I	I		140		
*	VALVE CLEARANCE				I	I	I	144		
	ENGINE OIL				INITIAL= 100 mi (150km), 20 operating hours or 1 month: R			116		
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			121		
*	ENGINE IDLE SPEED				I	I	I	—		
	RADIATOR COOLANT	NOTE 3				I	I	128		
*	COOLING SYSTEM	NOTE 2				I	I	—		

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).