

## Drive Chain ► Adjusting the Drive Chain Slack

6. Tighten the rear axle nut.

**Torque:** 65 lbf·ft (88 N·m, 9.0 kgf·m)

7. Recheck drive chain slack.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

## Checking the Drive Chain Wear

Check the chain wear label when adjusting the drive chain. If the stopper pin on the swingarm enters the red zone on the label after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.

**Chain:** RK 520MOZ6 or DID 520V8

If necessary have the drive chain replaced by your dealer.

