

Electrical Trouble ► Burned-out Light Bulb

1. Remove the headlight case by removing the bolts.
2. Remove the rubber dust cover.
3. Slightly press the socket and turn it counterclockwise.
4. Remove the bulb.
5. Install a new bulb and parts in the reverse order of removal.
 - Install the rubber dust cover with its "TOP" mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.

Headlight Bulb

