


AIR CLEANER CASE REMOVAL/INSTALLATION

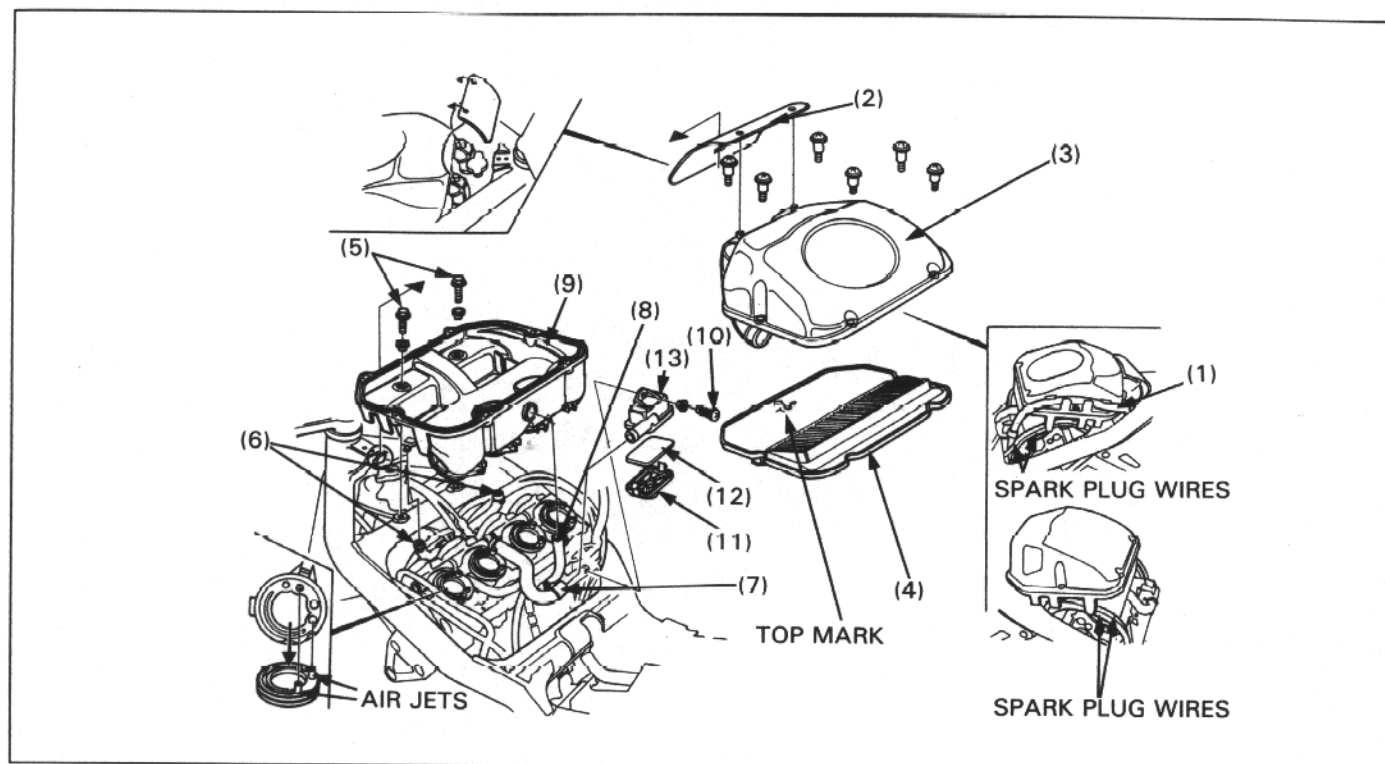

REQUISITE SERVICE

- Fuel tank removal/installation (page 2-4)

PROCEDURE		Q'ty	REMARKS
AIR CLEANER CASE REMOVAL ORDER			
(1)	Main wire harness	1	Installation is in the reverse order of removal. Install it into the wire harness clamp of the case cover.
(2)	Heat guard plate	1	
(3)	Air cleaner case cover	1	
(4)	Air cleaner element	1	
(5)	Air cleaner case bolt/collar	2/2	- Install it with the ↑ mark forwards and with the TOP mark facing up. - Except California Model - California Model Only - Align the holes of the connecting tubes with the air jets. - Install the spark plug wires as shown.
(6)	Crankcase breather tube	2	
(7)	Air hose	1	
(8)	Air injection tube (No. 15)	1	
(9)	Air cleaner case	1	
SUB AIR CLEANER CASE REMOVAL ORDER (Except California Model)			
(10)	Attaching screw	1	Installation is in the reverse order of removal.
(11)	Sub air cleaner case cover	1	
(12)	Sub air cleaner element	1	
(13)	Sub air cleaner case	1	
			NOTE: For element cleaning, refer to section 2 (AIR CLEANER: Oiled Urethane Foam Element) of the Common Service Manual.