

FUEL PUMP/FILTER

Turn the fuel valve OFF.


Remove the rear-left side cover (page 2-3).

Remove the fuel pump and fuel filter to the left.

Install the fuel filter and pump in the reverse order of removal.

NOTE

- Fuel filter orientation as shown.

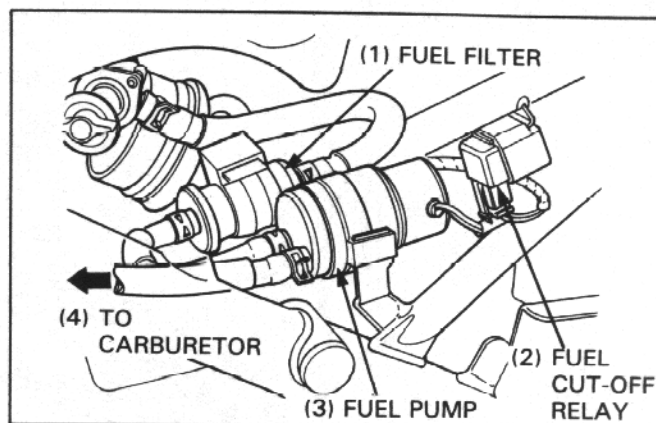

EMISSION CONTROL SYSTEMS (California Model Only)

EVAPORATIVE EMISSION CONTROL SYSTEM

PURGE CONTROL VALVE (PCV) AND AIR VENT CONTROL VALVE (AVCV) REMOVAL

Remove the following:

- fuel tank (page 2-4)
- air cleaner case (page 6-3)
- carburetors (page 6-4)

Disconnect the tubes from PCV and AVCV, and remove the set plate from the No. 1 carburetor float chamber cover. Remove the PCV and AVCV.

Inspect the PCV and AVCV (refer to section 7 of the Common Service Manual).

Install the PCV and AVCV in the reverse order of removal.

NOTE

- For PCV and AVCV tubes routing, see previous page.

