


Do not bend the oil inlet pipe.


Install the oil inlet pipe, new sealing washer and oil pipe bolt.

Tighten the bolt to the specified torque.


TORQUE: 37 N·m (3.8 kgf·m , 27 lbf·ft)

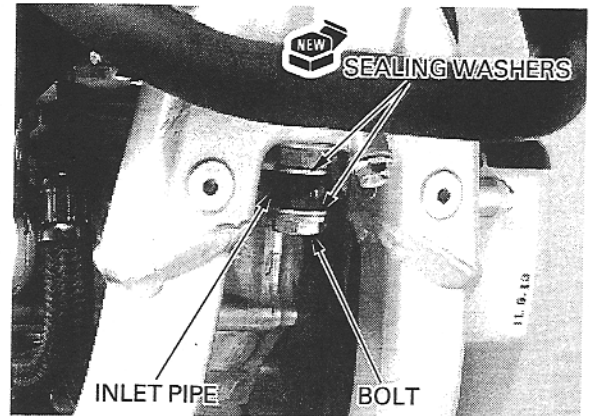

Install the new O-rings to the oil pipes.
Install the set plate to the oil pipes as shown.
Connect the pipes into the crankcase.

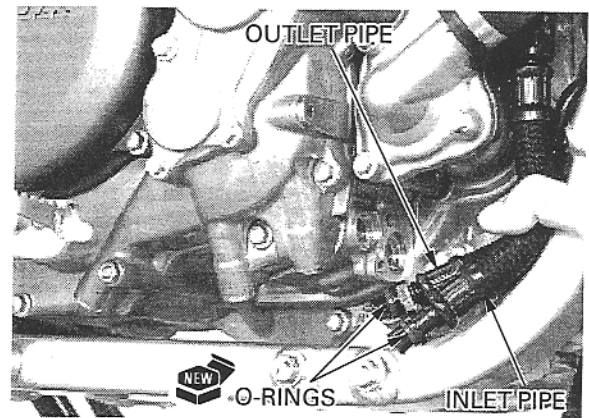

Install and tighten the set plate bolts securely.

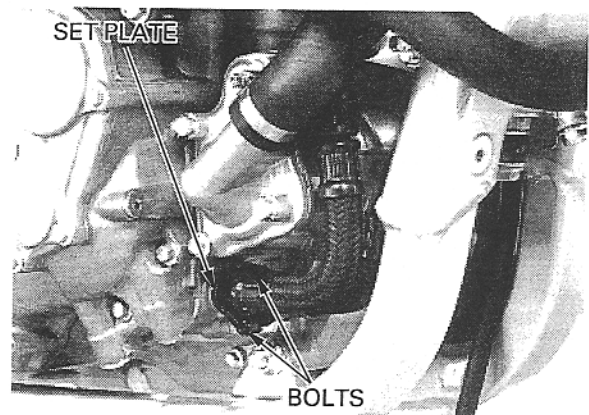

Install the radiator right mounting bolts and grill.
Install the right radiator shroud (page 2-2).
Install the skid plate (page 2-11).
After installation, fill the engine and frame oil tank with the engine oil (page 3-11) and check that there are no oil leaks.

