


COOLING SYSTEM


Install a new O-ring into the housing cover.

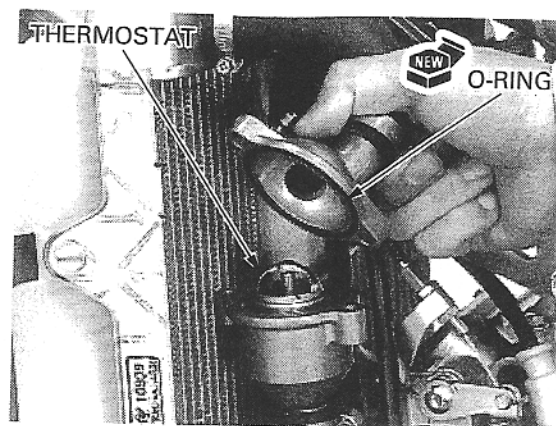

Install the thermostat housing cover.
Install and tighten the housing cover bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the fuel tank (page 2-5).
Fill and bleed the cooling system (page 6-6).

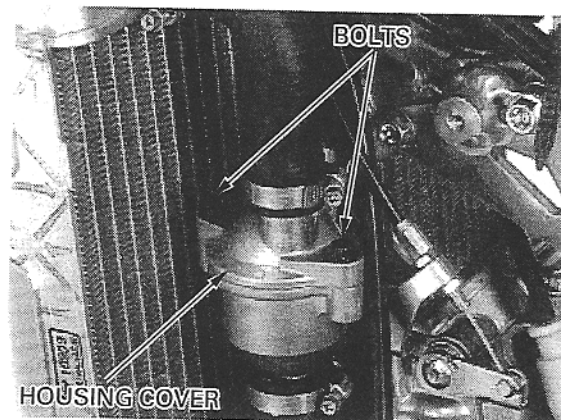

RADIATOR

REMOVAL

Remove the fuel tank (page 2-5).
Drain the coolant (page 6-5).

*Be careful not to
damage the
radiator fins.*

Remove the following:
— Right and left radiator grills
— Coolant overflow tube
— Upper and lower joint hoses
— Upper and lower radiator hoses

