



Remove the O-rings from the water pump.

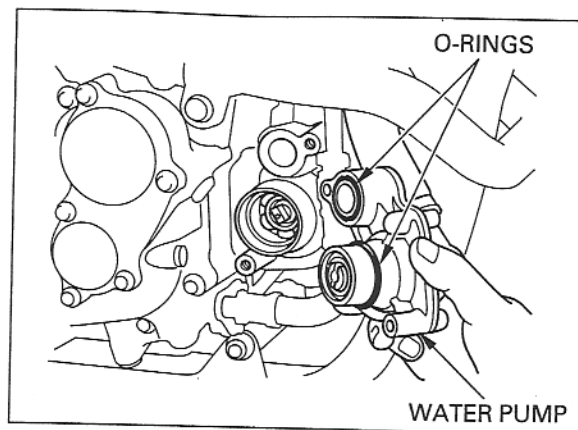

INSTALLATION

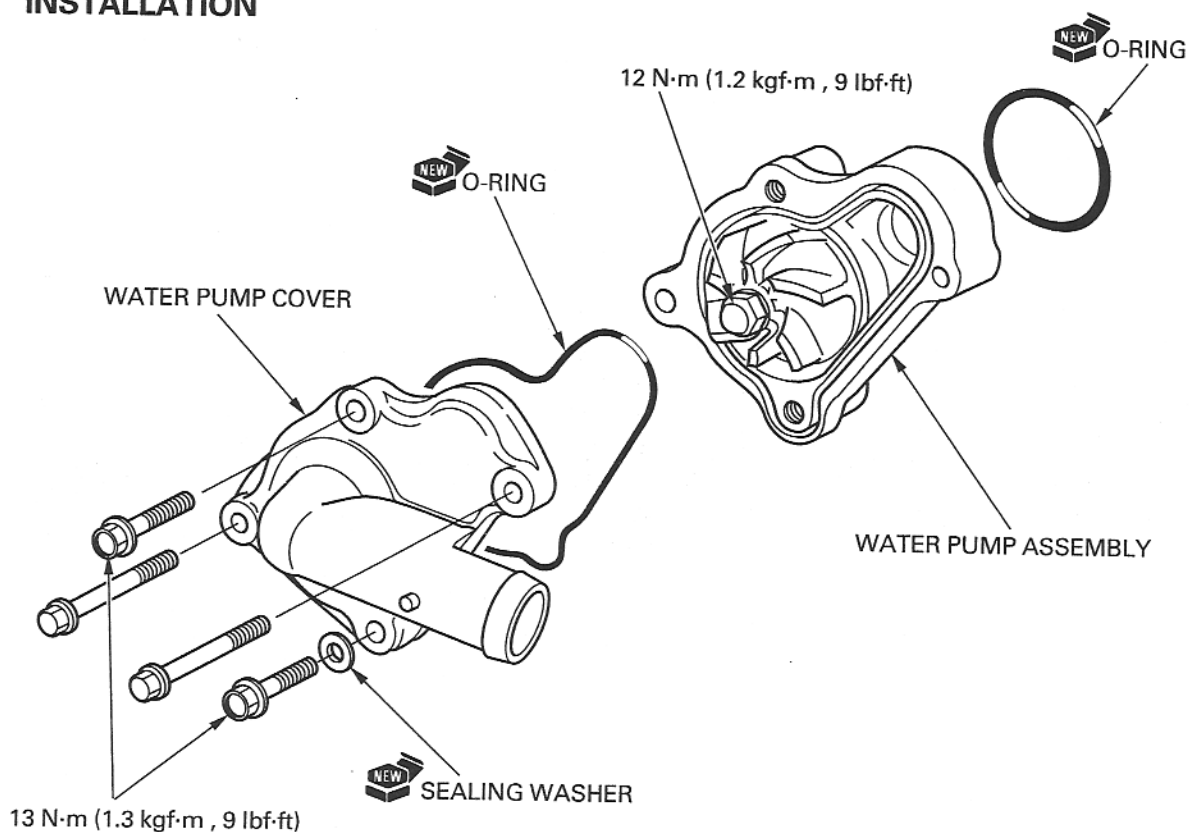

Apply a thin coat of grease to the new O-rings and install it in the water pump grooves.

Align the water pump shaft groove with the balancer gear shaft and install the water pump to the crankcase.

