


CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE


Hold the clutch center with the clutch center holder.
Remove the lock nut.

TOOL:


Clutch center holder 07724-0050002

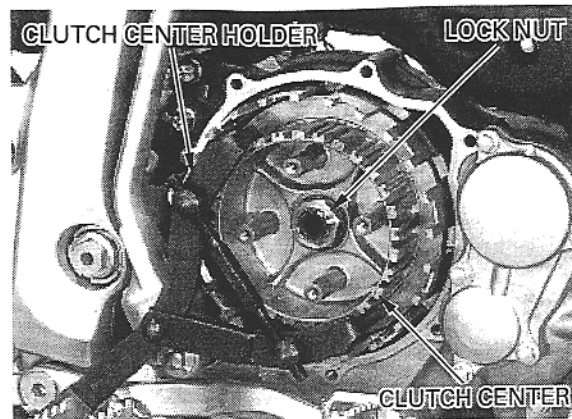

Remove the lock washer, thrust washer and clutch center.

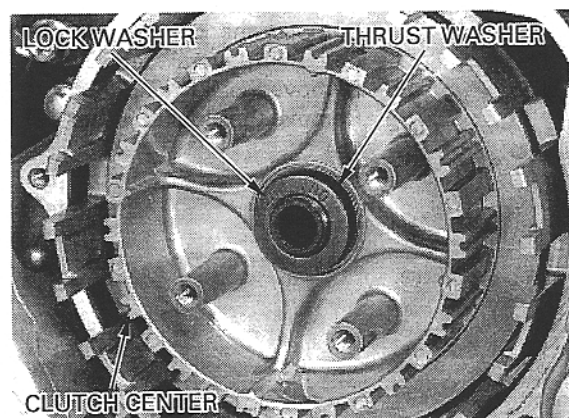

Remove the thrust washer and clutch outer.

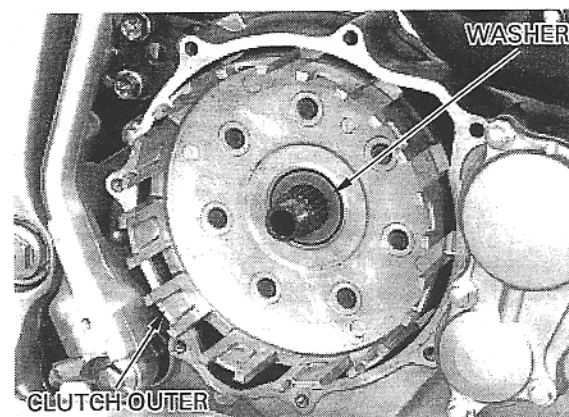

Remove the clutch outer guide.

