



Install the end plate to the fork spring's bottom side.

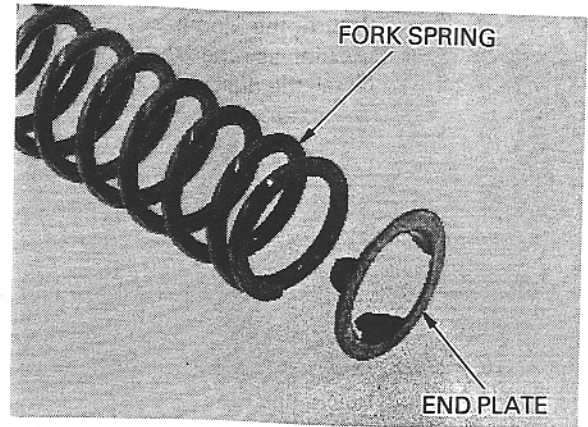


Wipe off any excessive oil from fork spring, then install it over the wire and into the slider. Install the spring seat and washers.

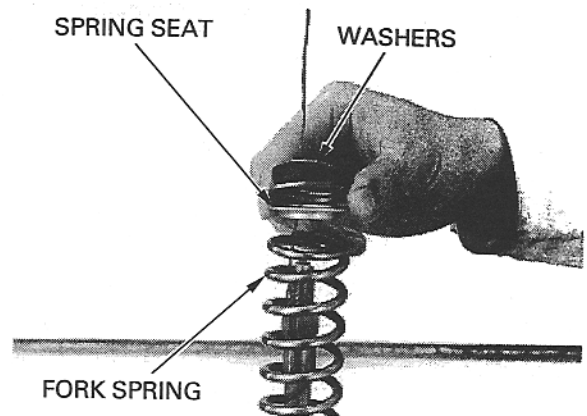

Remove the mechanic's wire while holding the lock nut. Coat a new fork cap O-ring with fork oil and install it. Hold the lock nut and tighten the fork cap to the specified torque.

TORQUE: 15 N·m (1.5 kgf·m , 11 lbf·ft)

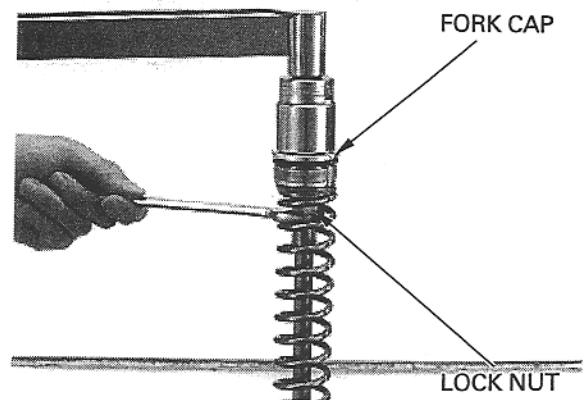

Install the fork cap into the fork tube.

