


HYDRAULIC BRAKE

Remove the snap ring and disconnect the reservoir hose joint from the master cylinder.

TOOL:

Snap ring pliers

07914-SA50001

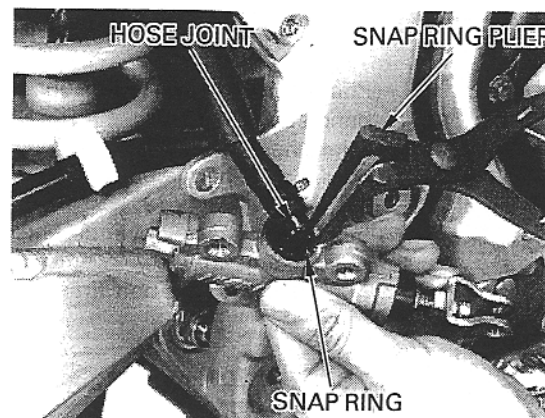

DISASSEMBLY


Remove the boot.

Remove the snap ring from the master cylinder body using a special tool as shown.

TOOL:

Snap ring pliers

07914-SA50001

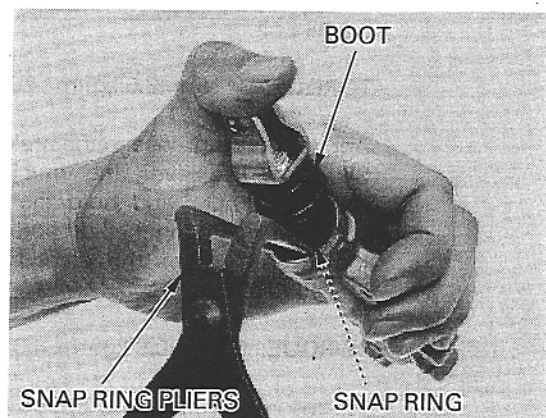


Remove the push rod, master piston and spring.

Clean the inside of the cylinder with brake fluid.

INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.

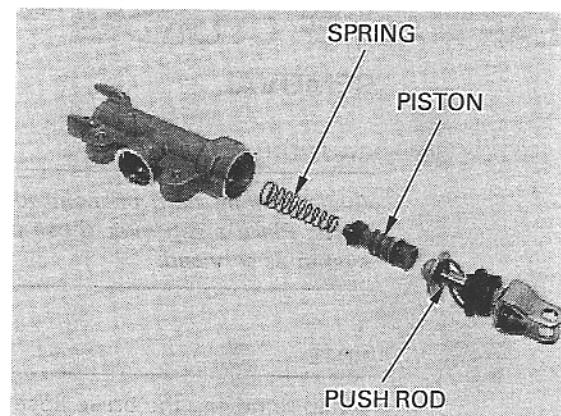

Measure the master cylinder I.D.

SERVICE LIMIT: 12.76 mm (0.502 in)

