

INDEX

AC REGULATOR	17-10	FRONT MASTER CYLINDER	16-7
AIR CLEANER	3-6	FRONT VISOR	2-3
AIR CLEANER HOUSING REMOVAL/		FRONT WHEEL	14-4
INSTALLATION	5-4	FUEL LINE	3-5
ALTERNATOR	17-9	FUEL TANK	2-5
BRAKE FLUID	3-19	GEARSHIFT CAM	10-20
BRAKE FLUID REPLACEMENT/AIR BLEEDING	16-3	GENERAL SAFETY	1-1
BRAKE PAD/DISC	16-5	HANDLEBAR	14-21
BRAKE PAD WEAR	3-20	HANDLEBAR SWITCHES	17-14
BRAKE PEDAL	16-19	HEADLIGHT	17-12
BRAKE SYSTEM	3-20	HEADLIGHT AIM	3-21
CABLE & HARNESS ROUTING	1-20	HORN	17-15
CAMSHAFT INSTALLATION	8-19	ICM (IGNITION CONTROL MODULE)	17-9
REMOVAL	8-7	IGNITION COIL	17-9
CARBURETOR ASSEMBLY	5-9	IGNITION SYSTEM INSPECTION	17-5
DISASSEMBLY	5-5	IGNITION TIMING	17-8
INSTALLATION	5-14	KICKSTARTER	10-15
REMOVAL	5-5	LEFT CRANKCASE COVER INSTALLATION	11-4
CHECK VALVE	4-7	REMOVAL	11-2
CLUTCH	10-3	LUBRICATION & SEAL POINTS	1-18
CLUTCH SYSTEM	3-21	MAINTENANCE SCHEDULE	3-3
COMPETITION MAINTENANCE SCHEDULE	3-4	MODEL IDENTIFICATION	1-3
COOLANT	6-4	NUTS, BOLTS, FASTENERS	3-24
COOLING SYSTEM	3-14	OIL PIPE	4-7
CRANKCASE ASSEMBLY	12-14	OIL PUMP	4-3
CRANKCASE BEARING REPLACEMENT	12-7	OIL STARINER SCREEN CLEANING	4-2
CRANKCASE BREATHER	5-4	PILOT SCREW ADJUSTMENT	5-15
CRANKCASE SEPARATION	12-3	PISTON INSTALLATION	9-7
CRANKSHAFT/BALANCER INSTALLATION	12-12	REMOVAL	9-4
REMOVAL	12-5	PRIMARY DRIVE GEAR	10-13
CYLINDER COMPRESSION	8-4	RADIATOR	6-8
CYLINDER HEAD ASSEMBLY	8-17	RADIATOR COOLANT	3-14
DISASSEMBLY	8-11	RADIATOR RESERVE TANK	6-12
INSTALLATION	8-19	RADIATOR SHROUD	2-2
REMOVAL	8-10	REAR BRAKE CALIPER	16-15
CYLINDER HEAD COVER ASSEMBLY	8-22	REAR BRAKE LIGHT SWITCH	17-15
DISASSEMBLY	8-6	REAR FENDER/MUD GUARD	2-4
INSTALLATION	8-23	REAR MASTER CYLINDER	16-9
REMOVAL	8-4	REAR WHEEL	15-4
CYLINDER INSTALLATION	9-8	REGULATOR/RECTIFIER	17-10
REMOVAL	9-3	RIGHT CRANKCASE COVER INSTALLATION	10-20
DECOMPRESSOR SYSTEM	3-13	REMOVAL	10-11
DRIVE CHAIN SLIDERS	3-18	SEAT	2-2
DRIVE CHAIN/SPROCKET	3-15	SERVICE INFORMATION	
DRIVE SPROCKET INSTALLATION	7-8	(ALTERNATOR)	11-1
REMOVAL	7-2	(CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE)	10-1
EMISSION CONTROL SYSTEM	1-23	(COOLING SYSTEM)	6-1
ENGINE IDLE SPEED	3-13	(CRANKCASE/CRANKSHAFT/BALANCER)	12-1
ENGINE INSTALLATION	7-5	(CYLINDER HEAD/VALVES)	8-1
ENGINE OIL	3-10	(CYLINDER/PISTON)	9-1
ENGINE OIL FILTER	3-12	(ELECTRICAL SYSTEM)	17-1
ENGINE REMOVAL	7-3	(ENGINE REMOVAL/INSTALLATION)	7-1
ENGINE STOP SWITCH	17-15	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
EXHAUST PIPE/MUFFLER	2-8	(FRONT WHEEL/SUSPENSION/STEERING)	14-1
FLYWHEEL INSTALLATION	11-4	(FUEL SYSTEM)	5-1
REMOVAL	11-3	(HYDRAULIC BRAKE)	16-1
FORK	14-9	(LUBRICATION SYSTEM)	4-1
FRONT BRAKE CALIPER	16-12	(MAINTENANCE)	3-1
FRONT BRAKE LIGHT SWITCH	17-15	(TRANSMISSION)	13-1
FRONT FENDER	2-3	(REAR WHEEL/SUSPENSION)	15-1