Engine Idle Speed

The best way to assure proper carburetion is to see your Honda dealer for regularly scheduled servicing, including carburetor adjustment.

Remember, idle speed adjustment is not a "cure-all" for other problems in your engine's fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.

The engine must be at normal operating temperature for accurate idle speed adjustment.

For information about carburetor adjustment and other parts replacement for riding at high altitude, see page 185.

Idle Speed Adjustment

Refer to *Safety Precautions* on page 54.

LEFT SIDE

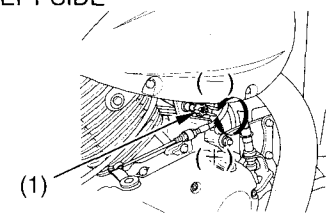

(1) throttle stop screw

(+) increase
(−) decrease

1. If the engine is cold, start it and warm it up with ten minutes of stop-and-go riding. Stop the engine.