

Rear Brake

Adjustment:

1. Place the motorcycle on its side stand.
2. Measure the distance the rear brake pedal (1) moves before the brake starts to take hold. Free play should be:
20–30 mm (3/4–1-1/4 in)
3. Make free play adjustments by turning the adjusting nut (2) at the brake arm.


NOTE:

- * Make sure the cut-out on the adjusting nut is seated on the brake arm pin (3) after making final free play adjustment.
- * If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.

4. Apply each brake several times and check for free wheel rotation when released.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.

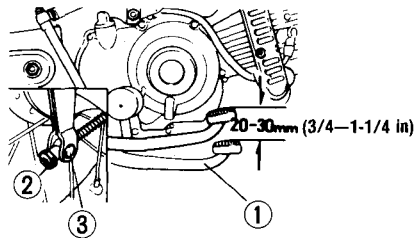

- (1) Rear brake pedal (3) Brake arm pin
(2) Adjusting nut