
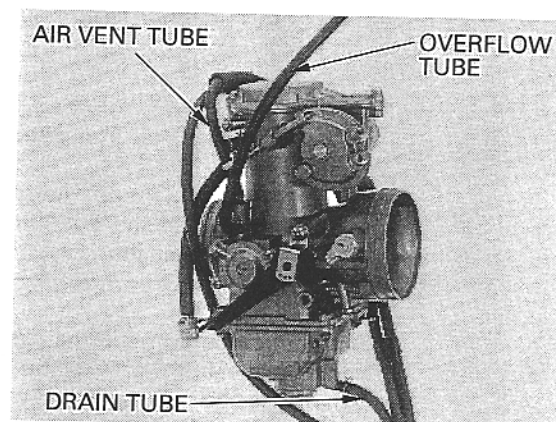


FUEL SYSTEM

Install the over flow tube, drain tube, air vent tubes and fuel line properly.

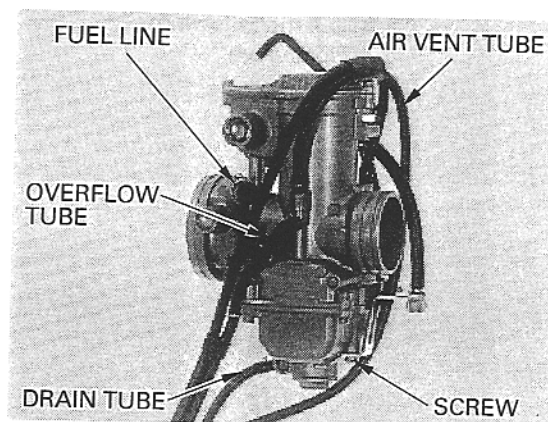

CARBURETOR INSTALLATION

Install the carburetor from the right side of the engine.

Tighten the carburetor insulator clamp screw and connecting tube clamp screw.



Connect the throttle cables to the throttle drum. Install the throttle cable guide and tighten the screw to the specified torque.

TORQUE: 4 N·m (0.4 kgf·m , 2.9 lbf·ft)

Route the cables and tubes properly (page 1-20).

Perform the following inspections and adjustments:

- Throttle operation (page 3-5).
- Pilot screw adjustment (page 5-15)

